


Firetrak - Adjusting Hold Open




1

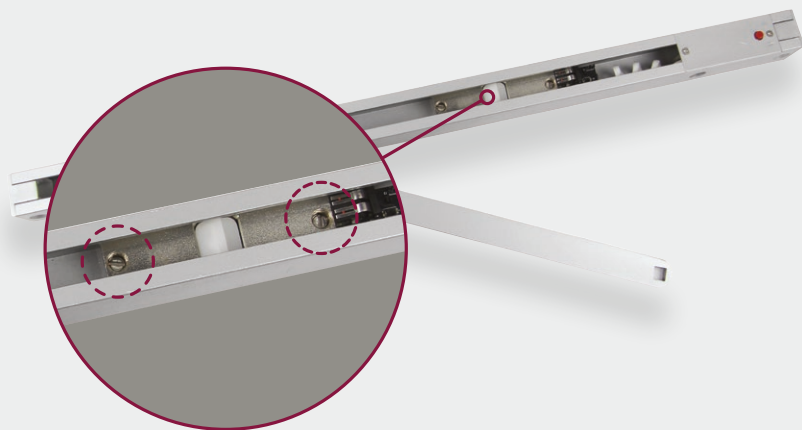


Undo two screws as shown.

2

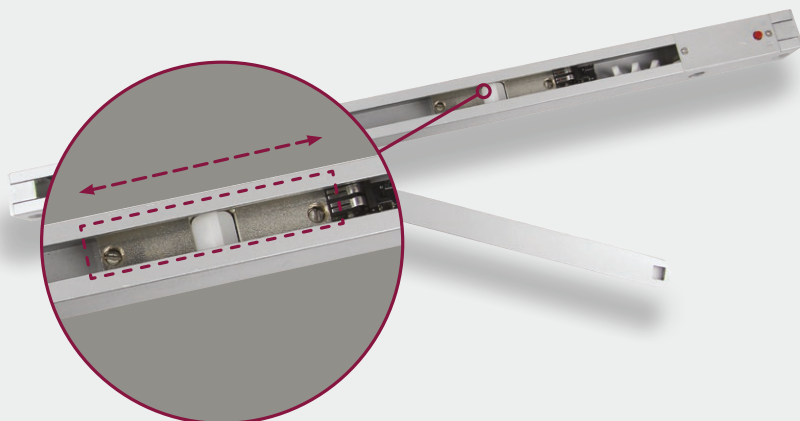

Move silver catch plate until a Philips head screw can be seen on the top of the track.

3

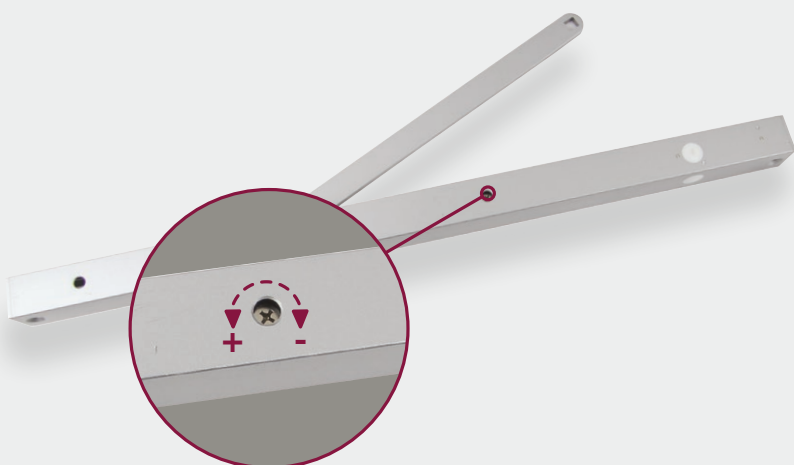

Turn this screw **anti-clockwise** to make the hold open **stronger** or **clockwise** to make the hold open **weaker**.