


TH.106/107 Rutland Emergency Release Stop

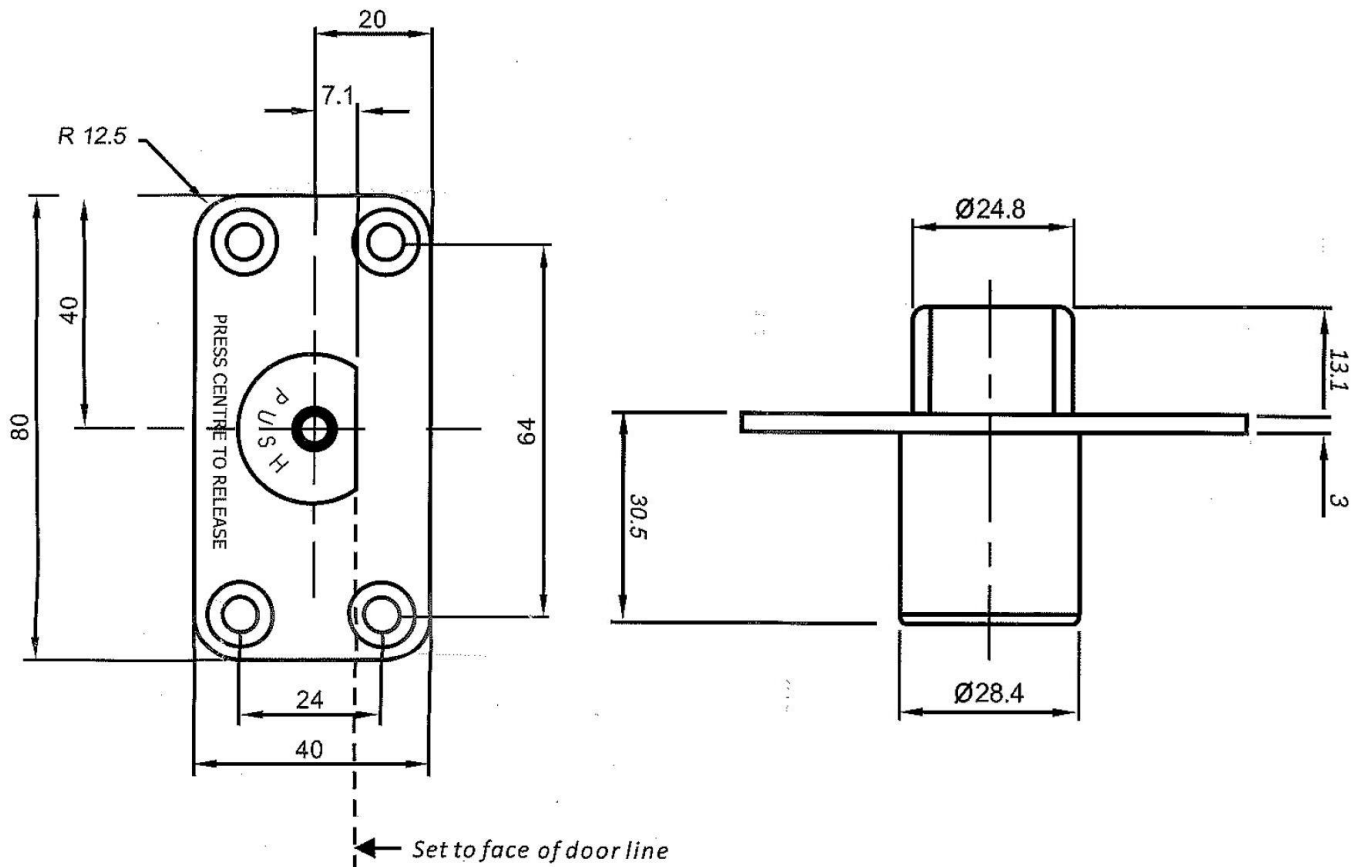

Installation:

Align flat side of the plunger to the face of the door

Drill frame to minimum 31 mm depth

Operation:

Press the plunger in, flush with the face plate, to release the door. Depress the centre button to reset the door stop.

Maintenance:

Lightly oil moving parts. Check operation