




## Hold Open Arm

HOA.1 in Black with adjustable angle of holding and adjustable strength for a variety of doors.

Adjustable with spring tension in the middle of the arm

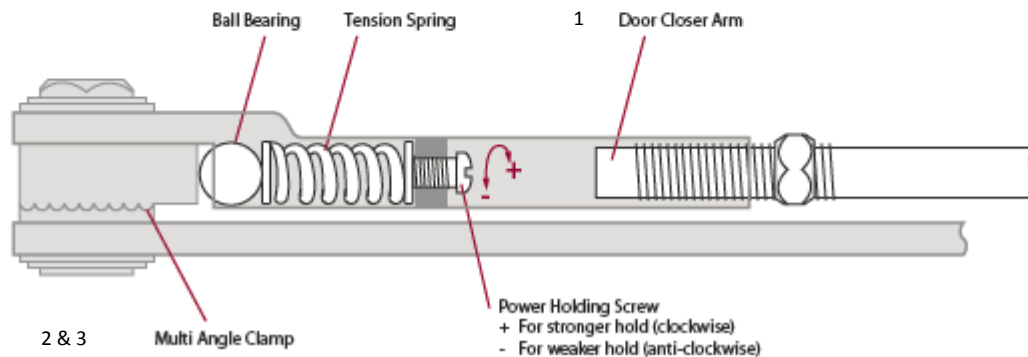

### Instructions how to Adjust Hold Open Arm

1. To adjust the holding force, undo door closer arm completely and adjust screw with screwdriver + for stronger or – for weaker hold open force, then re-fix the Door Closer arm
2. To adjust the hold open angle, open the door till the hold open engages, release the Multi Angle Clamp, but ensure you hold the door still while adjusting this part as the teeth will shear off if the door moves while loosely connected.
3. Select the desired hold open angle, and then firmly tighten the Multi Angle Clamp again at this angle. ***It is essential this is completely tightened to prevent the teeth sheering off under the force when the door moves.***