


Intumescent Fitting Instruction

FOR RUTLAND LETTERPLATE




1

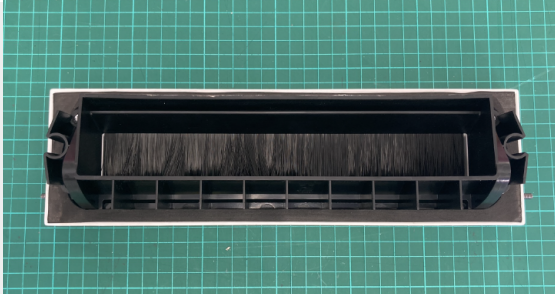


Take the letterplate from box and place the INTERNAL SIDE on stable place

2

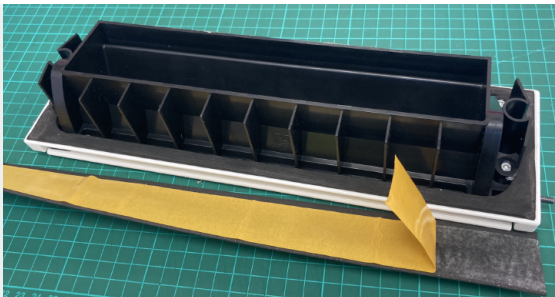

Take 1 pcs intumescent from intumescent pack and remove release paper from one end

3

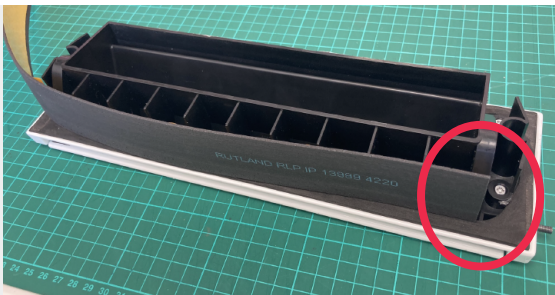


Stick the intumescent from the rib bottom area of Internal flap (Highlighted in RED circle)

4



Remove the rest of the release paper and stick the intumescent around the letterplate tightly. Continue with the other intumescent as highlighted

5

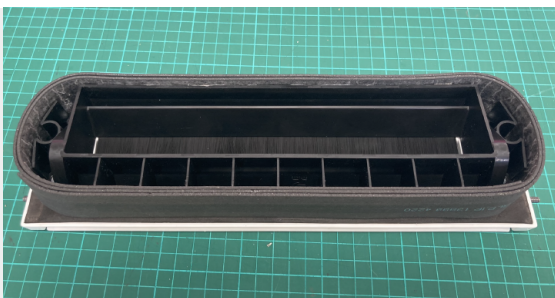

Continue to stick the intumescent around the letterplate as shown in picture. There must be three layers of intumescent covering the bottom ribbed section