## **Intumescent Fitting Instruction**

FOR RUTLAND LETTERPLATE - FD30 Intumescent Code: RLP.IP



1



Take the letterplate from the box and separate the INTERNAL SIDE in preparation to apply the intumescent wrap.

2



Remove the release paper from one end of one piece of intumescent wrap as shown.

3




Apply the intumescent wrap, starting from the ribbed bottom area, as highlighted in **RED** circle. Remove the rest of the release paper and apply the intumescent tightly around the letterplate sleeve.

4



Apply the second intumescent wrap as highlighted, ensuring a neat joint as shown - and continue to wrap fully around the sleeve.

5

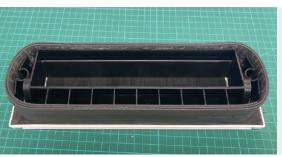

Ensure there are 3 layers of intumescent on the bottom ribbed section of the sleeve.

Now continue the installation from Point 3 in the fitting instruction

## **Intumescent Fitting Instruction**

FOR RUTLAND LETTERPLATE - FD60 Intumescent Code: RLP.IP60




1




Take the letterplate from the box and separate the INTERNAL SIDE in preparation to apply the intumescent wrap.

2

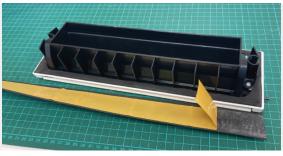

Remove the release paper from one end of one piece of intumescent wrap as shown.

3

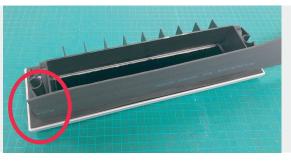

Apply the intumescent wrap, starting from the top flat area, as highlighted in **RED** circle. Remove the rest of the release paper and apply the intumescent tightly around the letterplate sleeve.

4



Apply the second intumescent wrap as highlighted, ensuring a neat joint as shown - and continue to wrap fully around the sleeve.

5



Ensure there are 3 layers of intumescent on the bottom flat section of the sleeve.

Now continue the installation from Point 3 in the fitting instruction