


## Fitting Instruction

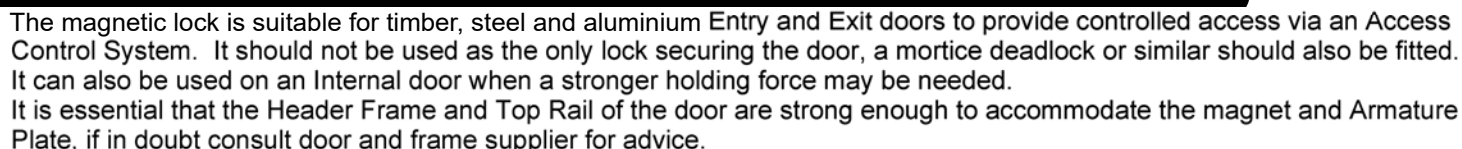

**Important points to consider during installation:**

1. Check that the door is properly aligned with the door frame when in the closed position. If the gap around the door and frame is not equal the magnet should not be fitted until the door is correctly aligned.
2. Always handle the equipment with care as damage to the mating surfaces of the magnet or armature plate may reduce locking efficiency.
3. Ensure the correct screws and fittings from the fixing pack are used as incorrect screws or fittings will affect the operation of the magnetic lock and armature plate.
4. It is essential that the magnetic lock and armature plate are correctly aligned and installed correctly.
5. When using the template the door must be in the closed and latched position.
6. Thread lock must be applied to all threads on the magnetic lock and fixing brackets and the armature plate bolt.

FRAME DETAIL - OUTWARD OPEN 1		FRAME DETAIL - OUTWARD OPEN 2		FRAME DETAIL - INWARD OPEN	
DEEP FRAME HEADER	FIG 1	SHALLOW FRAME HEADER	FIG 2	Z&L BRACKET APPLICATION	FIG 3

1. Fig. 1 shows an outward opening door with a deep frame header. The Standard Flat Mounting plate which comes with the magnet can be used if measurement 'A' is at least 60mm (2.36") and 'B' is at least 80mm (3.15").
2. Fig. 2 shows an outward opening door with a shallow frame header. The optional Transom 'L' bracket (AC-EMBR006) must be used if measurement 'A' is less than 45mm (1.75") and 'B' is at least 80mm (3.15").
3. Fig. 3 shows an inward opening door for which the 'Z&L' bracket set must be used. The optional 'Z&L' bracket set (AC-EMBR026F) must be used if measurement 'A' is up to 20mm (0.78") and 'B' is at least 60mm (2.36"), 'C' must be at least 60mm (2.36").


**If any of the above measurement requirements do not match you may need to use a different magnetic lock.**




**RUTLAND**  
Page 1 OF 7

# Rutland Slimline Electro Magnetic Lock REM10020


## Installation to Deep Header frame using Transom Flat Mounting Plate - Step 1-10

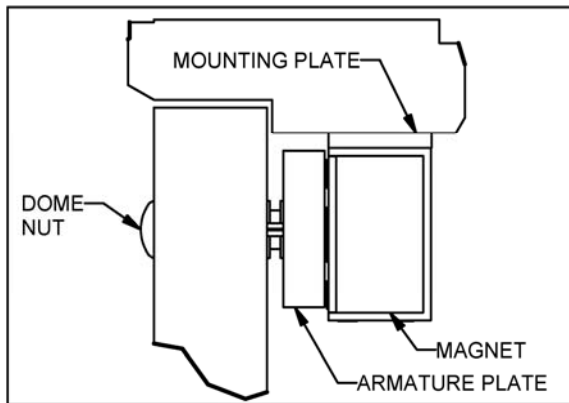


ASSEMBLED ELECTRO MAGNET

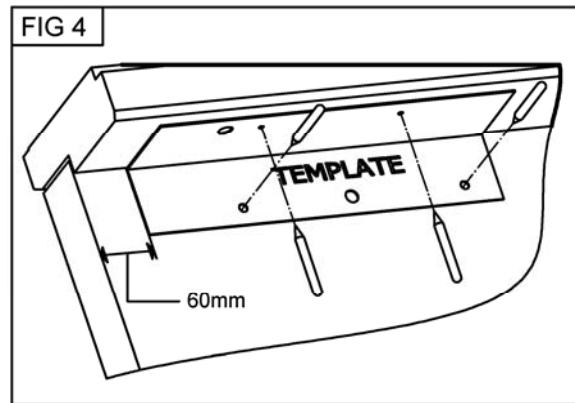


1. Check that the magnet will fit to the Door & Head Frame (see Fig.1).
2. With the door closed and latched fix the template to the door and frame. Place the edge of the template 60mm (2.4") from the side frame (see Fig.4).
3. Mark the centre of each hole shown on the template and drill holes to size and depth stated on Template.
4. **From the outside** of the door enlarge the 9mm hole to 12mm to a depth of 36mm (On Hollow doors enlarge the hole to 16mm through the outer door skin only to accommodate the Aluminium spacer (C).

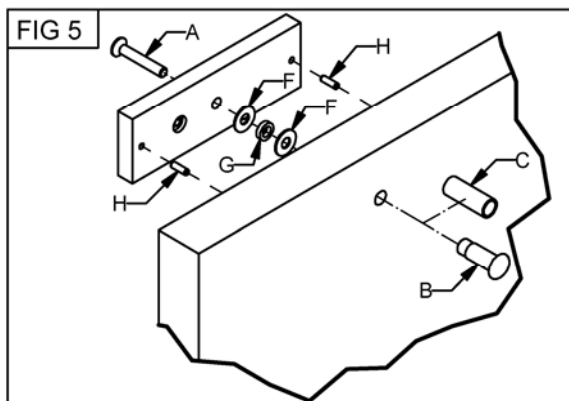


5. Push the Dome nut (B) into the 12mm hole in the door (for a hollow door push the the Aluminium spacer (C) into the 16mm hole then cut down flush with door face. Push Dome nut (B) into Spacer (C).
6. Gently tap the 2 guide pins (H) into the holes on the back of the Armature plate. Push the M8 50mm Allen bolt (A) through the countersunk hole in the Armature plate. Slide a Steel washer (F) over the M8 Allen bolt at the back of the Armature plate followed by a Rubber washer (G) and a Steel washer (F). (see Fig.5).
7. Fix the Armature plate to the door using the Allen key (L) and tighten until the Armature plate sits 3-5mm away from the face of the door. **Do not apply thread lock at this stage.**

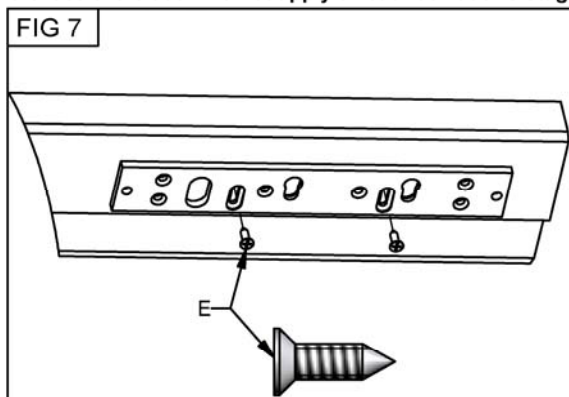

9. Place the Mounting plate on to the frame making sure the 10mm cable hole is visible through the oval hole of the plate. Fix using two No 8 15mm Csk screws (E) through the slotted holes into pilot holes drilled previously (see Fig.7).

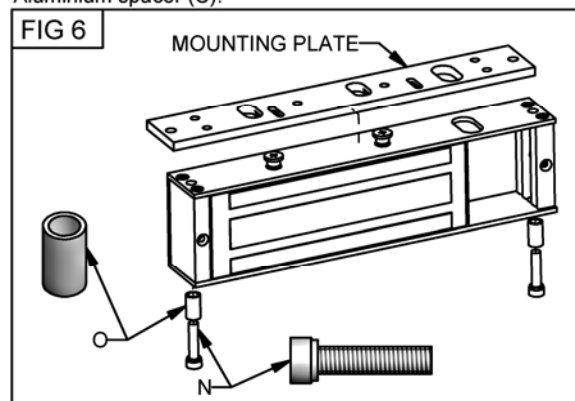

8. Using the Allen key wrench (L) remove the two M6 Allen bolts (N) and metal spacer (O) through the holes at the base of the magnetic lock. Slide the Mounting plate forward and lift up to remove it from the lock (see Fig.6).

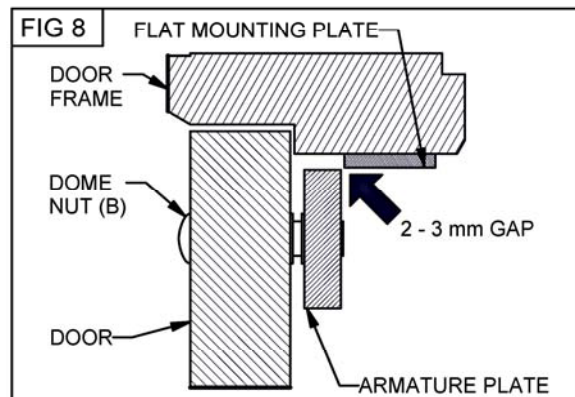


10. With the door closed and latched adjust the Mounting plate towards the Armature plate until the edges are 2-3mm apart and parallel along the length of the armature plate (see Fig.8).




# Rutland Slimline Electro Magnetic Lock REM10020




## Installation to Deep Header frame using Transom Flat Mounting Plate - Step 11-20

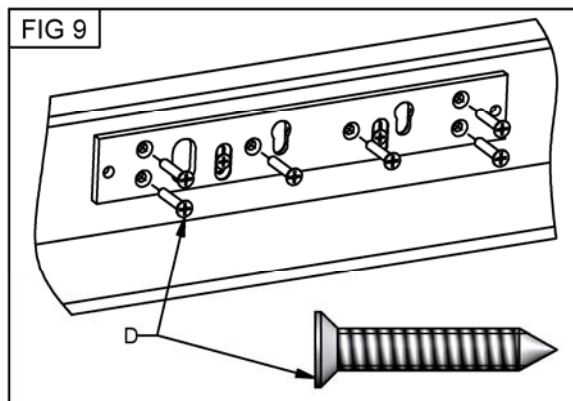


11. Mark the centres of the 6 countersunk holes through the Mounting plate.
12. Drill six 3.2mm dia. holes to a depth of 25mm for the No 10. 32mm Csk screws.
13. Fix the Mounting plate with the 6 No. 10 32mm Csk screws (D). (see Fig.9).

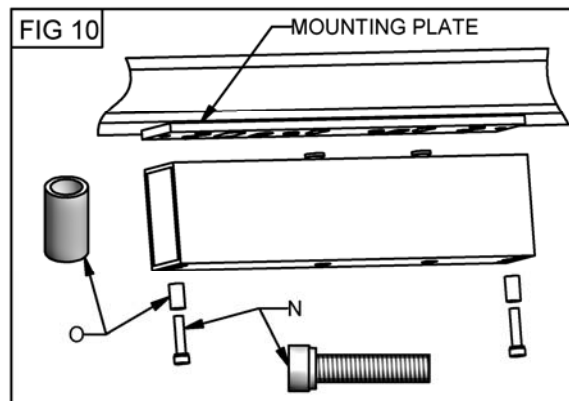


14. Hold the Magnet with the front facing the armature plate and the mushroom head screws at the top. Lift the magnet up onto the Mounting plate with the mushroom head screws located into the 13mm slotted holes and push forward towards the Armature plate. (see Fig.10).
15. Fix the magnet to the mounting plate using two M6 Allen bolts (N) and Metal Spacer (O) fixed through the holes in the bottom of the magnet and tighten with the Allen key wrench (L).

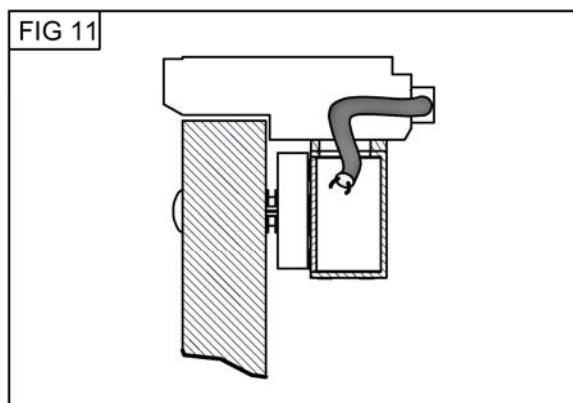

16. Pass lock cable through the 10mm hole in the door frame (see Fig.11) and connect to Magnet PCB as per wiring instructions on pages 7&8.
17. Apply voltage to the Magnet. Close the door and check Armature plate is correctly aligned with the magnet. Apply firm pressure against the door to check magnet is holding properly. Remove voltage and open the door.

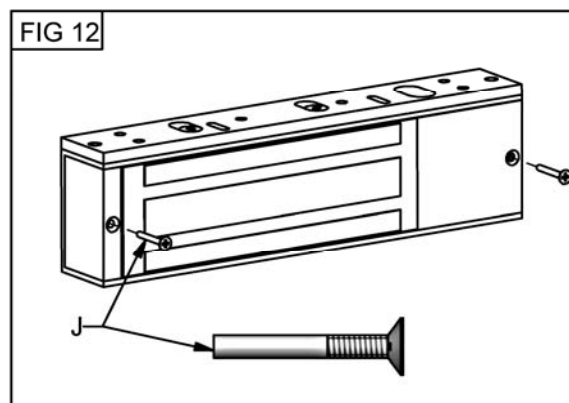


18. Remove M8 Allen bolt (A) from the Armature plate and apply Thread lock. Re-fit as per steps 6&7.
19. Remove one at a time the M6 Allen bolt (N) from the bottom of the magnet and apply Thread lock. Re-fit as per step 15.
20. Using the two M4 25mm Csk screw (J) fix the PCB cover plate in position on the magnet and into the counter sunk hole at the opposite end (see Fig.12). These screws will prevent the M6 Allen bolt from unscrewing (see Fig.12A).

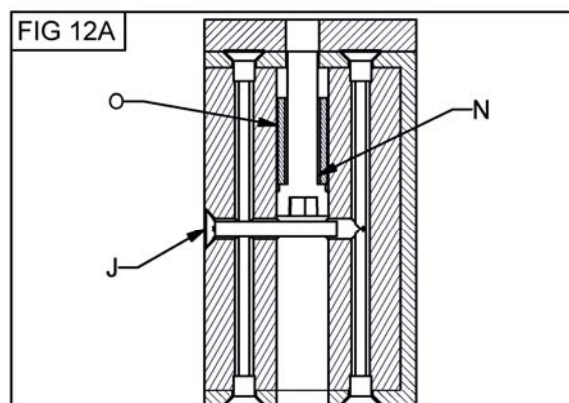


SAFETY FEATURE WHICH PREVENTS  
ALLEN BOLTS FROM UNSCREWING

# Rutland Slimline Electro Magnetic Lock REM10020


## Installation to Shallow Header frame using Transom 'L' Bracket - Step 1-12

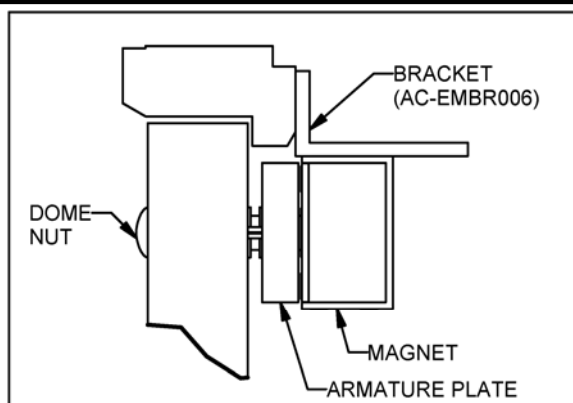

ASSEMBLED ELECTRO MAGNET

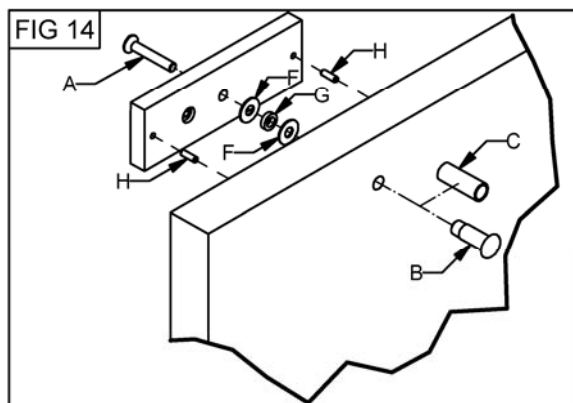


5. Push the Dome nut (B) into the 12mm hole in the door (for a hollow door push the the Aluminium spacer (C) into the 16mm hole then cut down flush with door face. Push Dome nut (B) into Spacer (C).
6. Gently tap the 2 guide pins (H) into the holes on the back of the Armature plate. Push the M8 50mm Allen bolt (A) through the counter sunk hole in the Armature plate followed by one Rubber washer (G) sandwiched between 2 Steel washers (F) behind the Armature plate. (see Fig.14).
7. Fix the Armature plate to the door using the Allen key (L) and tighten until the Armature plate sits 3-5mm away from the face of the door. **Do not apply threadlock at this stage.**

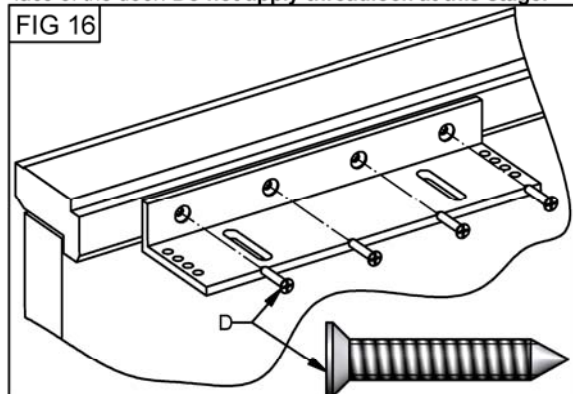


10. Use the Transom 'L' bracket (AC-EMBR006) as a template. Place the short side between the vertical lines on the frame (make sure it is flat against the frame) the bottom of the bracket should be 5mm below the underside of the frame header (fig 16).
11. Mark the centres of the four Counter sunk holes. Drill 3.0mm dia holes to a depth of 25mm. Fix the 'L' bracket using four No 10. 32mm Csk screws (fig 16).

FIG 13

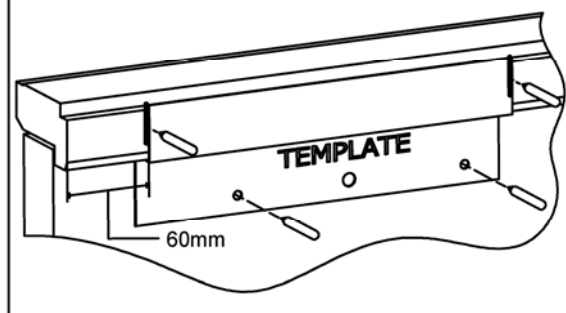


1. Check that the Magnet and Bracket will fit to the Door and Head Frame. (see Fig.2).
2. With the door closed and latched, tape the template to the door and frame. Place the edge of the template 60mm from the side frame. (see Fig.13).
3. Mark vertical lines for the 'L' bracket at the edge of the template, mark centre of each hole shown on the template. Drill all holes to the size and depth shown on template.
4. From the outside of the door enlarge the 9mm hole to 12mm to a depth of 36mm (on a hollow metal door drill a 16mm hole through the outer door skin only to accommodate the Aluminium spacer (C).

FIG 15

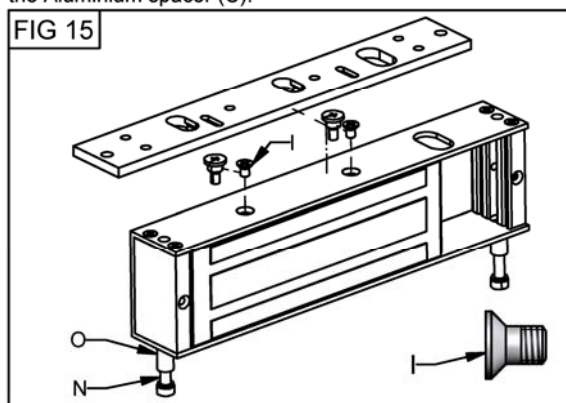

8. Using the Allen key wrench (L) remove the two M6 Allen bolt (N) and Metal spacer (O) through the bottom of the magnetic lock. Slide the Mounting plate forward and lift up to remove it from the magnet. (see Fig.15).
9. Remove the two Mushroom head screws from the top of the magnet and replace with the two M5 8mm machine screw (I).


FIG 17

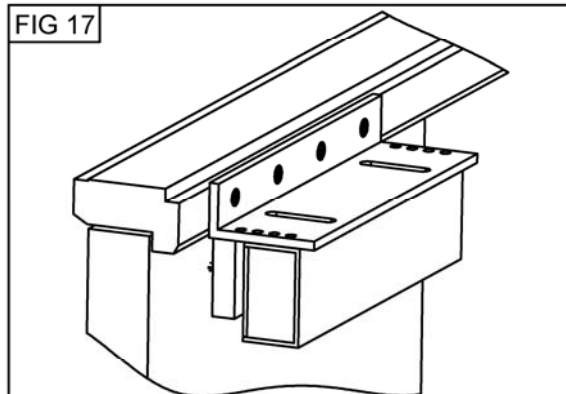


12. With the door closed and latched place the face of the magnet so that it touches the Armature plate and check that the hole in the top of the magnet lines up with one of the tapped holes on the bracket. If the holes do not line up loosen the M8 Allen bolt (A) making sure the gap behind the armature plate is no more than 7mm. (fig 17).

# Rutland Slimline Electro Magnetic Lock REM10020

Installation to Shallow Header frame  
using Transom 'L' Bracket - Step 13-18

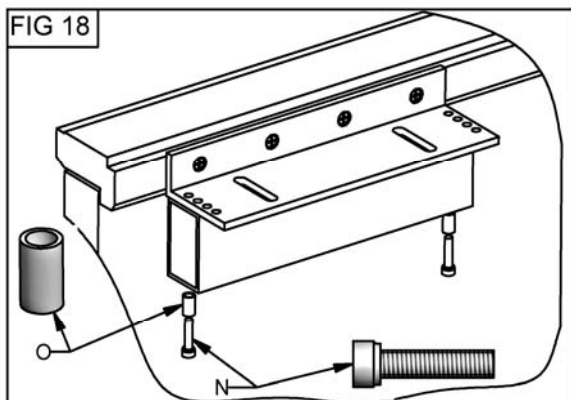


13. Fix the magnet to the bracket using two M6 Allen bolts (N) and Metal spacer (O) fixed through the holes in the bottom of the magnet and tighten with the Allen key wrench (L). (see Fig.18).

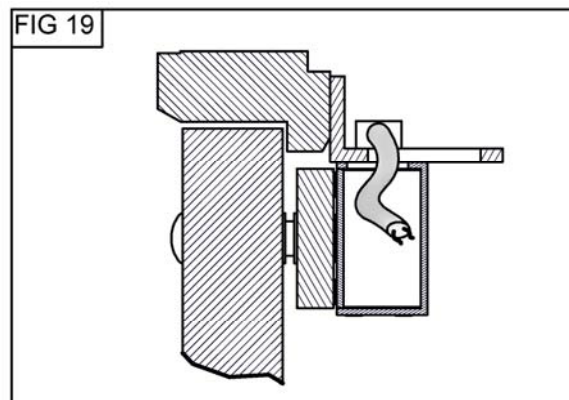

14. Pass lock cable through the cable entry hole (see Fig.19) and connect to Magnet PCB as per the wiring instructions on pages 7&8.


15. Apply voltage to the Magnet. Close the door and check Armature plate is correctly aligned with the magnet. Apply firm pressure against the door to check magnet is holding properly. Remove voltage and open the door.

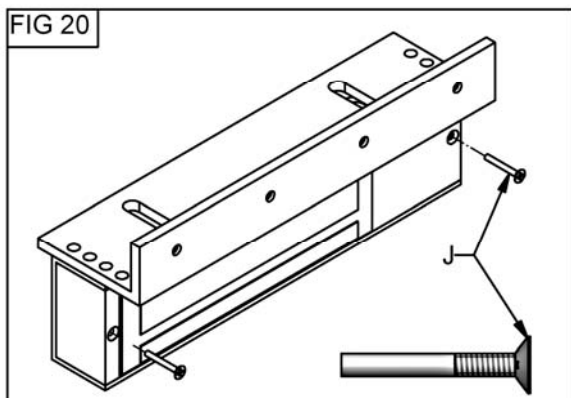

16. Remove M8 Allen bolt (A) from Armature plate and apply Thread lock. Re-fit as per step 6&7.

17. Remove one at a time the M6 Allen bolt (N) from the bottom of the magnet and apply Thread lock. Re-fit as per step 13.

18. Using the two M4 25mm Csk screw (J) fix the PCB Cover plate in position on the magnet and into the counter sunk hole at the opposite end (see Fig.20). These screws will prevent the M6 Allen bolt from unscrewing (see Fig.20A).

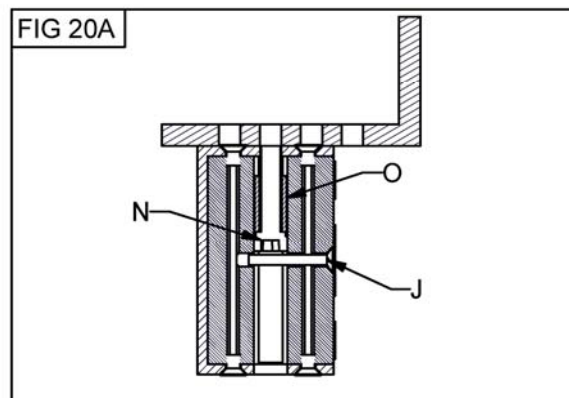

**SAFETY FEATURE WHICH PREVENTS  
ALLEN BOLTS FROM UNSCREWING**



# Rutland Slimline Electro Magnetic Lock REM10020

## Wiring Instruction




The standard magnet is designed to be operated by 12 or 24 volt DC systems. The Printed Circuit Board (PCB) in the magnet is factory set for 12V operation but can easily be changed for 24V operation (see wiring detail). The PCB also has built - in protection against Back EMF surges which means a separate Diode or MOV is not needed. Because the magnet is Fail Unlock (Fail Safe) it needs a constant DC supply to hold the Armature plate in position, it is therefore recommended that a Rechargeable Battery is fitted in the Power supply.

### Important Points to consider before Installation:-

1. The Magnet must be connected to a Regulated DC Power supply (Ideally with Battery Backup facility).
2. Input voltage at the magnet PCB must be 12 or 24V  $\pm$  10%
3. The PCB already has built-in protection against Back EMF surges.
4. The Maximum current draw for 12V is 500mA and for 24V 250mA (Double version will draw twice as much).
5. DO NOT reverse polarity as this will result in damage to the PCB and Coil.
6. There are two versions of the PCB - Unmonitored (Models 10010 and 10060) and Monitored (Models 10020 and 10040).
7. Ensure all cabling and wiring connections conform to current Electrical Legislation.

### Wiring detail for Standard Magnet UnMonitored - Model:10010 / 10060

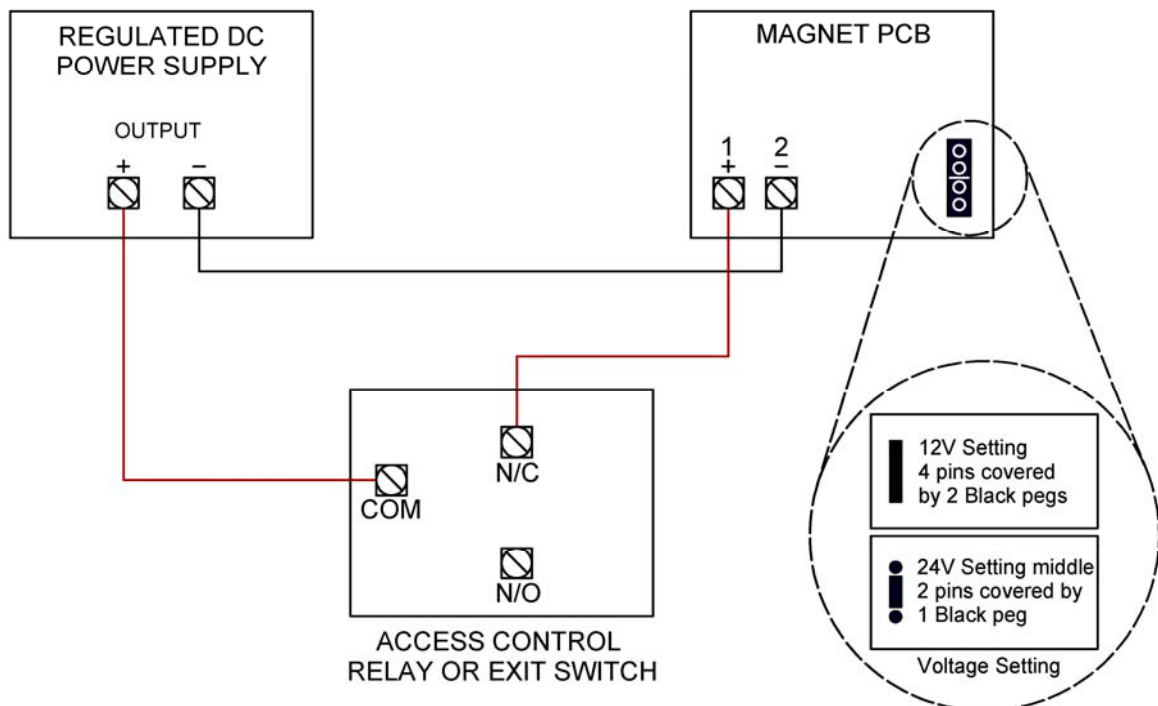


1. Check magnet PCB is set for correct voltage (Factory setting is 12V).
2. Connect Negative Output (-) from Power Supply to terminal 2 (-) on Magnet PCB.
3. Connect Positive Output (+) from Power Supply to Common of Relay or Exit switch.
4. Connect Normally Closed (N/C) on Relay or Exit switch to terminal 1 (+) on Magnet PCB.
5. With the door open switch Power supply On and check that the Magnet will hold a Screwdriver.
6. Operate the Access Control Relay or Exit switch whilst holding the screwdriver to check magnet is working.
7. If the Screwdriver is released close the door and check the Holding force by pulling / pushing the door.
8. Re-fit the PCB cover plate with M4 25mm Csk Screw (J).

# Rutland Slimline Electro Magnetic Lock REM10020

## Wiring Instruction (Cont.)



Wiring detail for Standard Magnet Monitored - Model 10002 / 10004

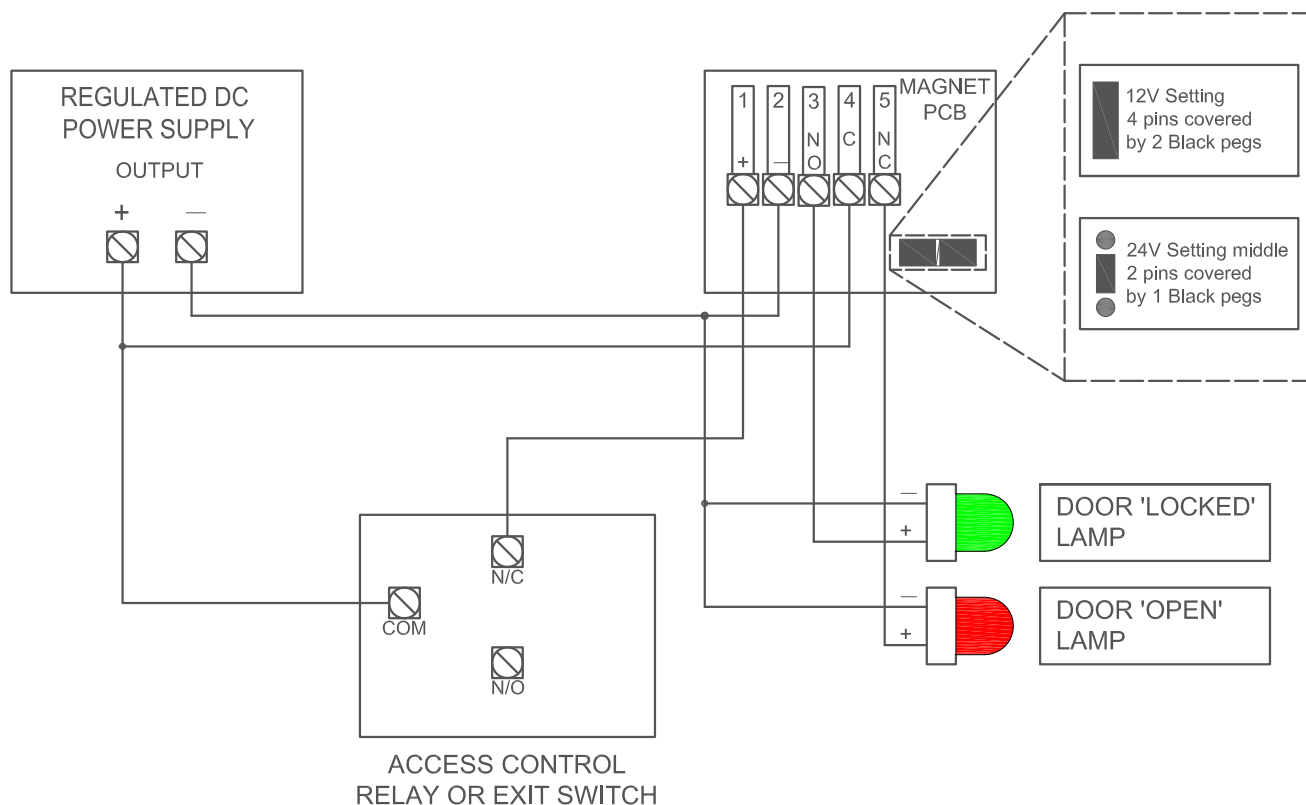

1. Check Magnet PCB is set for correct voltage (Factory setting is 12V).
2. Connect Negative Output (-) from Power Supply to terminal 2 (-) on Magnet PCB.
3. Connect Positive Output (+) from Power Supply to Common of Relay or Exit switch.
4. Connect Normally Closed (N/C) on Relay or Exit switch to terminal 1 (+) on Magnet PCB.
5. Connect Positive Output (+) from Power Supply to terminal 4 (Common) on Magnet PCB.
6. Connect Negative Output (-) from Power Supply to Negative (-) terminal on each Lamp.
7. Connect terminal 3 (NO) to Positive (+) terminal of Lamp (DOOR LOCKED).
8. Connect terminal 5 (NC) to Positive (+) terminal of Lamp (DOOR OPEN).
9. With the door open switch Power supply On and check that the Magnet will hold a screwdriver.
10. Operate the Access Control Relay or Exit switch whilst holding the screwdriver to check magnet is working.
11. If the Screwdriver is released close the door and check the Holding force by pulling / pushing the door.
12. Check that the 2 Lamps are working correctly when the Magnet locks and unlocks.
13. Re-fit the PCB cover plate with M3 18mm Csk Screw (J).

Before installing, add the threadlocker to screws,  
Firmly tighten the screws to prevent loosening.

For fire rating on steel and timber doors check fire test evidence. The intumescent sleeve may be required for the armature bolt-through fixing. Surface mounted armature plate housing will not require intumescent.

Rutland Trading Co. Ltd.  
Unit 4, Holmewood Business Park  
Chesterfield Road, Holmewood,  
Chesterfield S42 5US  
Tel: +44 (0) 1246 261491