




Setting Up the Jig

(This setup only needs to be done once for a doorset of the same type.)

1. Position the closer fitting template correctly on the door.
2. Place the jig over the fitting template. (Fig 1)
3. Adjust the thumb screw to align the jig with the correct position indicated on the fitting template. (Fig 2)
4. Secure the position by tightening the thumb screw with the spring washer and nut.

Pre-Drilling

1. Hold the jig firmly against the corner of the door and frame. (Fig3)
2. Pre-drill the 4 x scissors arm/ 3 x slide arm closer body fixing holes according to the door handing (if stated):
 - Use the holes marked RH for a right-hand door.
 - Use the holes marked LH for a left-hand door.
3. Pre-drill the 3 x scissors arm PAB/ 4 x rail fixing holes:
 - Use the holes marked RH/ RR – if the door hinges are on the right side.
 - Use the holes marked LH/ LR – if the door hinges are on the left side.

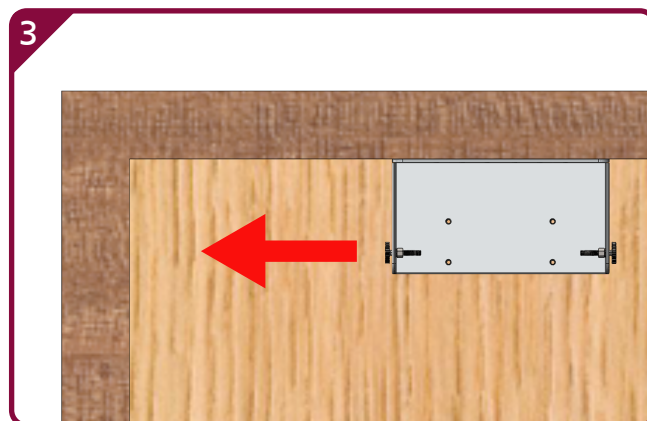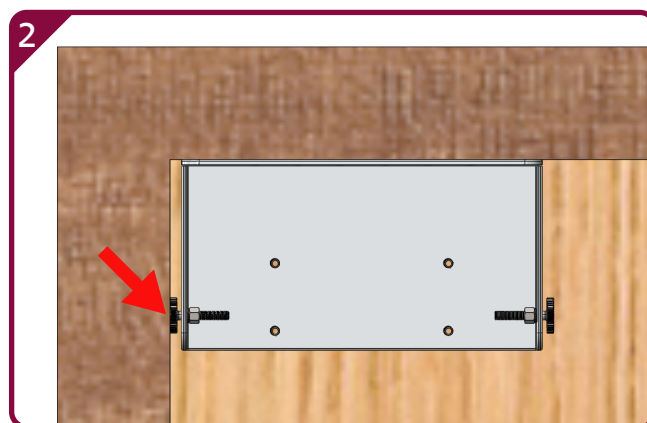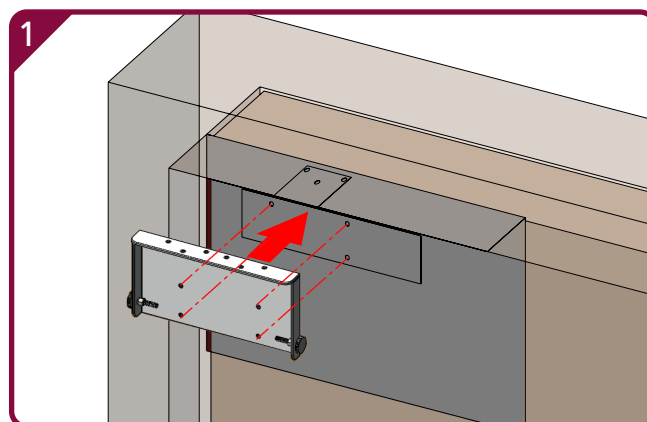

Additional Information

Maintenance - Use a moist cloth only, as household abrasives or solvents may affect surface finish - lubrication may occasionally be required.
Suitable for 44mm-54mm door thickness